
There are two modes for upgrading: USB serial port upgrade and OTA upgrade.

- **USB Upgrade:**

1. Connect module to the serial port using USB. In the upgrade software, select USB, select the upgraded program, and then click on “UPDATE USB”.

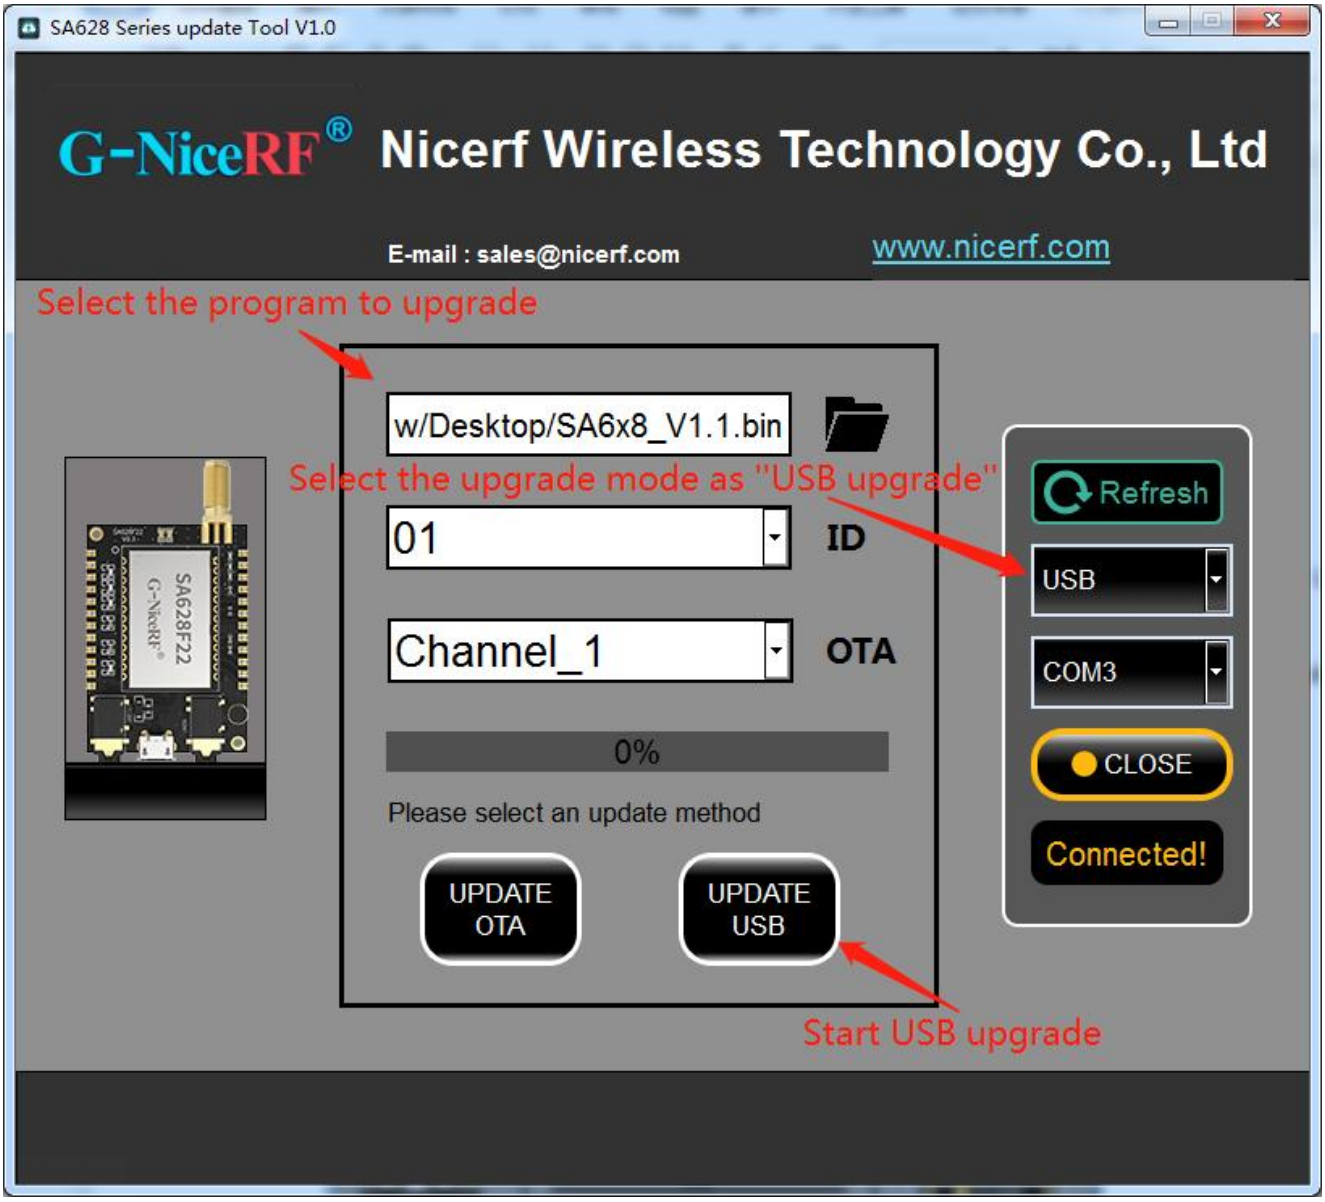

2. During the upgrade, the Progress bar will reach 100%. And the“Updating firmware” will be displayed below the Progress bar.




3. After the upgraded, it shows “Update completed”, and the Red Leds and Blue LEDs on module light on once, then the Red light on.




➢ OTA Upgrade

1. Connect the upgrade module to the serial port, then open the PC software, select the upgrade mode as “OTA upgrade”, select the program to be upgraded and the ID and channel of the upgraded module, and then click “UPDATE OTA”.

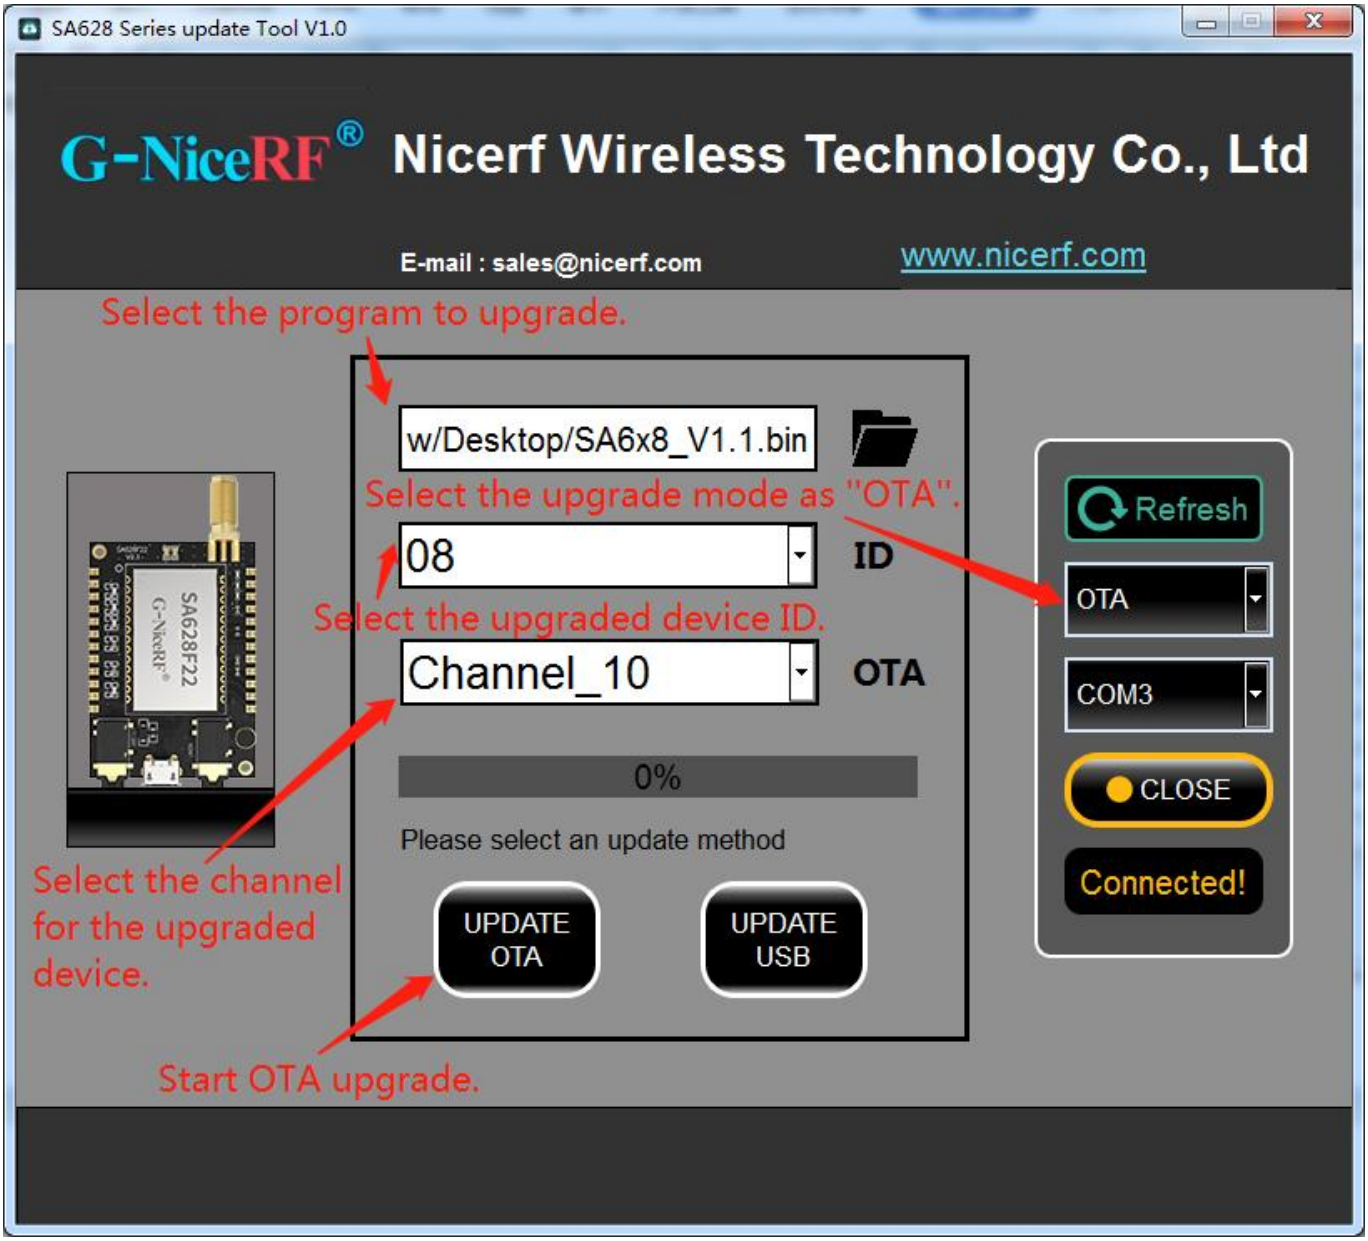

2. After clicking "UPDATE OTA", the upgrade module will flash the Red LEDs and the PC software will display “Device ID 8 Connected!”.

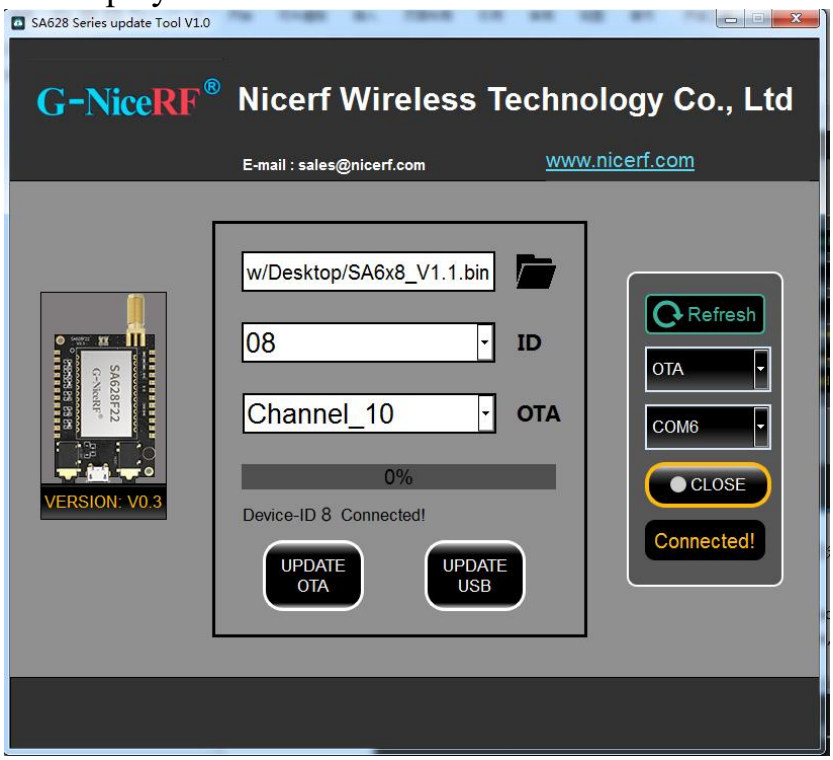

3. During the upgrade, the Red LEDs and Blue LEDs of the upgraded module are flashing all the time, and the Progress bar will reach 100%. At the same time, “Updating firmware” will be displayed below the Progress bar.



4. After the upgraded, it shows “Update completed”, and the Red Leds and Blue LEDs on module light on once, then the Red light on.

